# Assembly Instruction Sheet #IS-SK004-601 For Style SK004-601

Tools Required: Flathead screwdriver, Phillips screwdriver, pilers, wire cutters, wire strippers, electrical tape, safety glasses. Light Source:

Estimated Assembly Time: 10-20 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the focuse. Contact customer service for replacement parts.


### ▲ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture.

We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

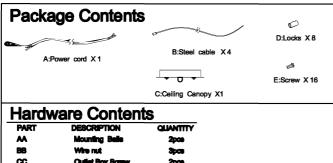

PART DESCRIPTION CLIANTITY

AA Mounting Belle 2pos

BB Wive ruit 3pos

CC Outlet Box Sorew 2pos


DD Mounting Sorew 2pos

EE Crounter 1pos

AA BB CC DD


STEP 1 :

A.Use the wire cap to connect the two live wire(L) from the power cord and from the socket. Then connect the two neutral wires (N) together.

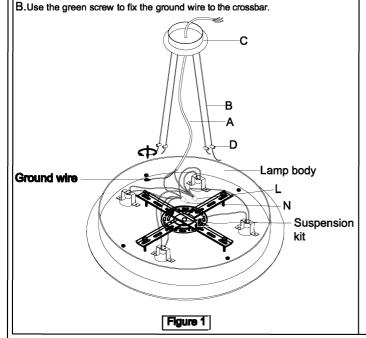


### STEP 2 :

A.Thread the end of steel cable through one of the top holes on the lock provided, then through the holes on the crossbar.

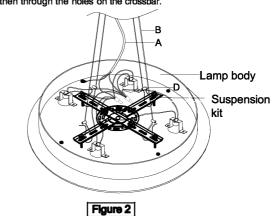

### STEP 3 :

A.Thread the steel cable back up and through the second hole on the lock provided. Then use the screws to tighten both ends using a azrewdriver.

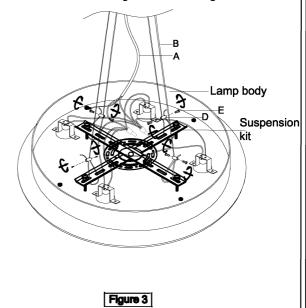

## STEP 4 — Attach Mounting Screws, Lock Washers and Hex Nuts to Crossbar

A. Line up a set of holes on the Crossbar (EE) and Holes on the ceiling canopy.

Thread Mounting Screws (DD) into the holes on the Crossbar (EE). Pass Lock Washers and thread Hex Nuts onto the Mounting Screws (DD).

Hand tighten until snug.

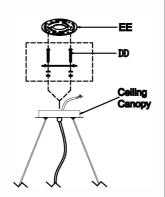


Figure 4

### STEP 5 - Attach Crossbar to Outlet Box

A. Pass the supply wires through the Crossbar (EE).

Attach the Crossbar (EE) to the Outlet Box (CC)

with the head of the Green Ground Screw facing you.

Secure it with Outlet Box

Screws (not included).

Tighten until snug.

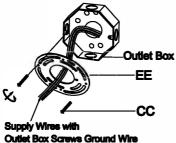


Figure 5

### STEP 6 - Fit Ceiling Canopy to Crossbar Assembly

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Mounting Balls (AA). Note: The ceiling canopy should be snug against the ceiling and the Mounting Balls (AA). If not, adjust the length of the

If not, adjust the length of the Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Crossbar (EE) until the correct length is achieved. Once the ceiling canopy is secure, remove the Mounting Ball (AA) and ceiling canopy and proceed to Step 8



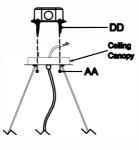


Figure 6

### STEP 7 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.



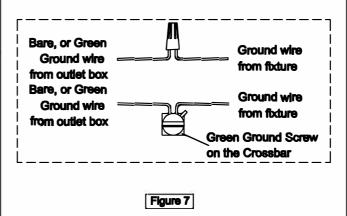

### STEP 8 - Install Celling Canopy to Celling

A. Carefully tuck all wires into the outlet box and position the celling canopy of the Fixture Body (A) over the outlet box. Align the holes in the celling canopy with the Mounting Screws (DD). Secure with Mounting Balls (AA) and hand tighten until snug.

